






CRANE



C 3290-RA

*Fitted with #E1018 shower
and tub filler, instead of as
shown.*

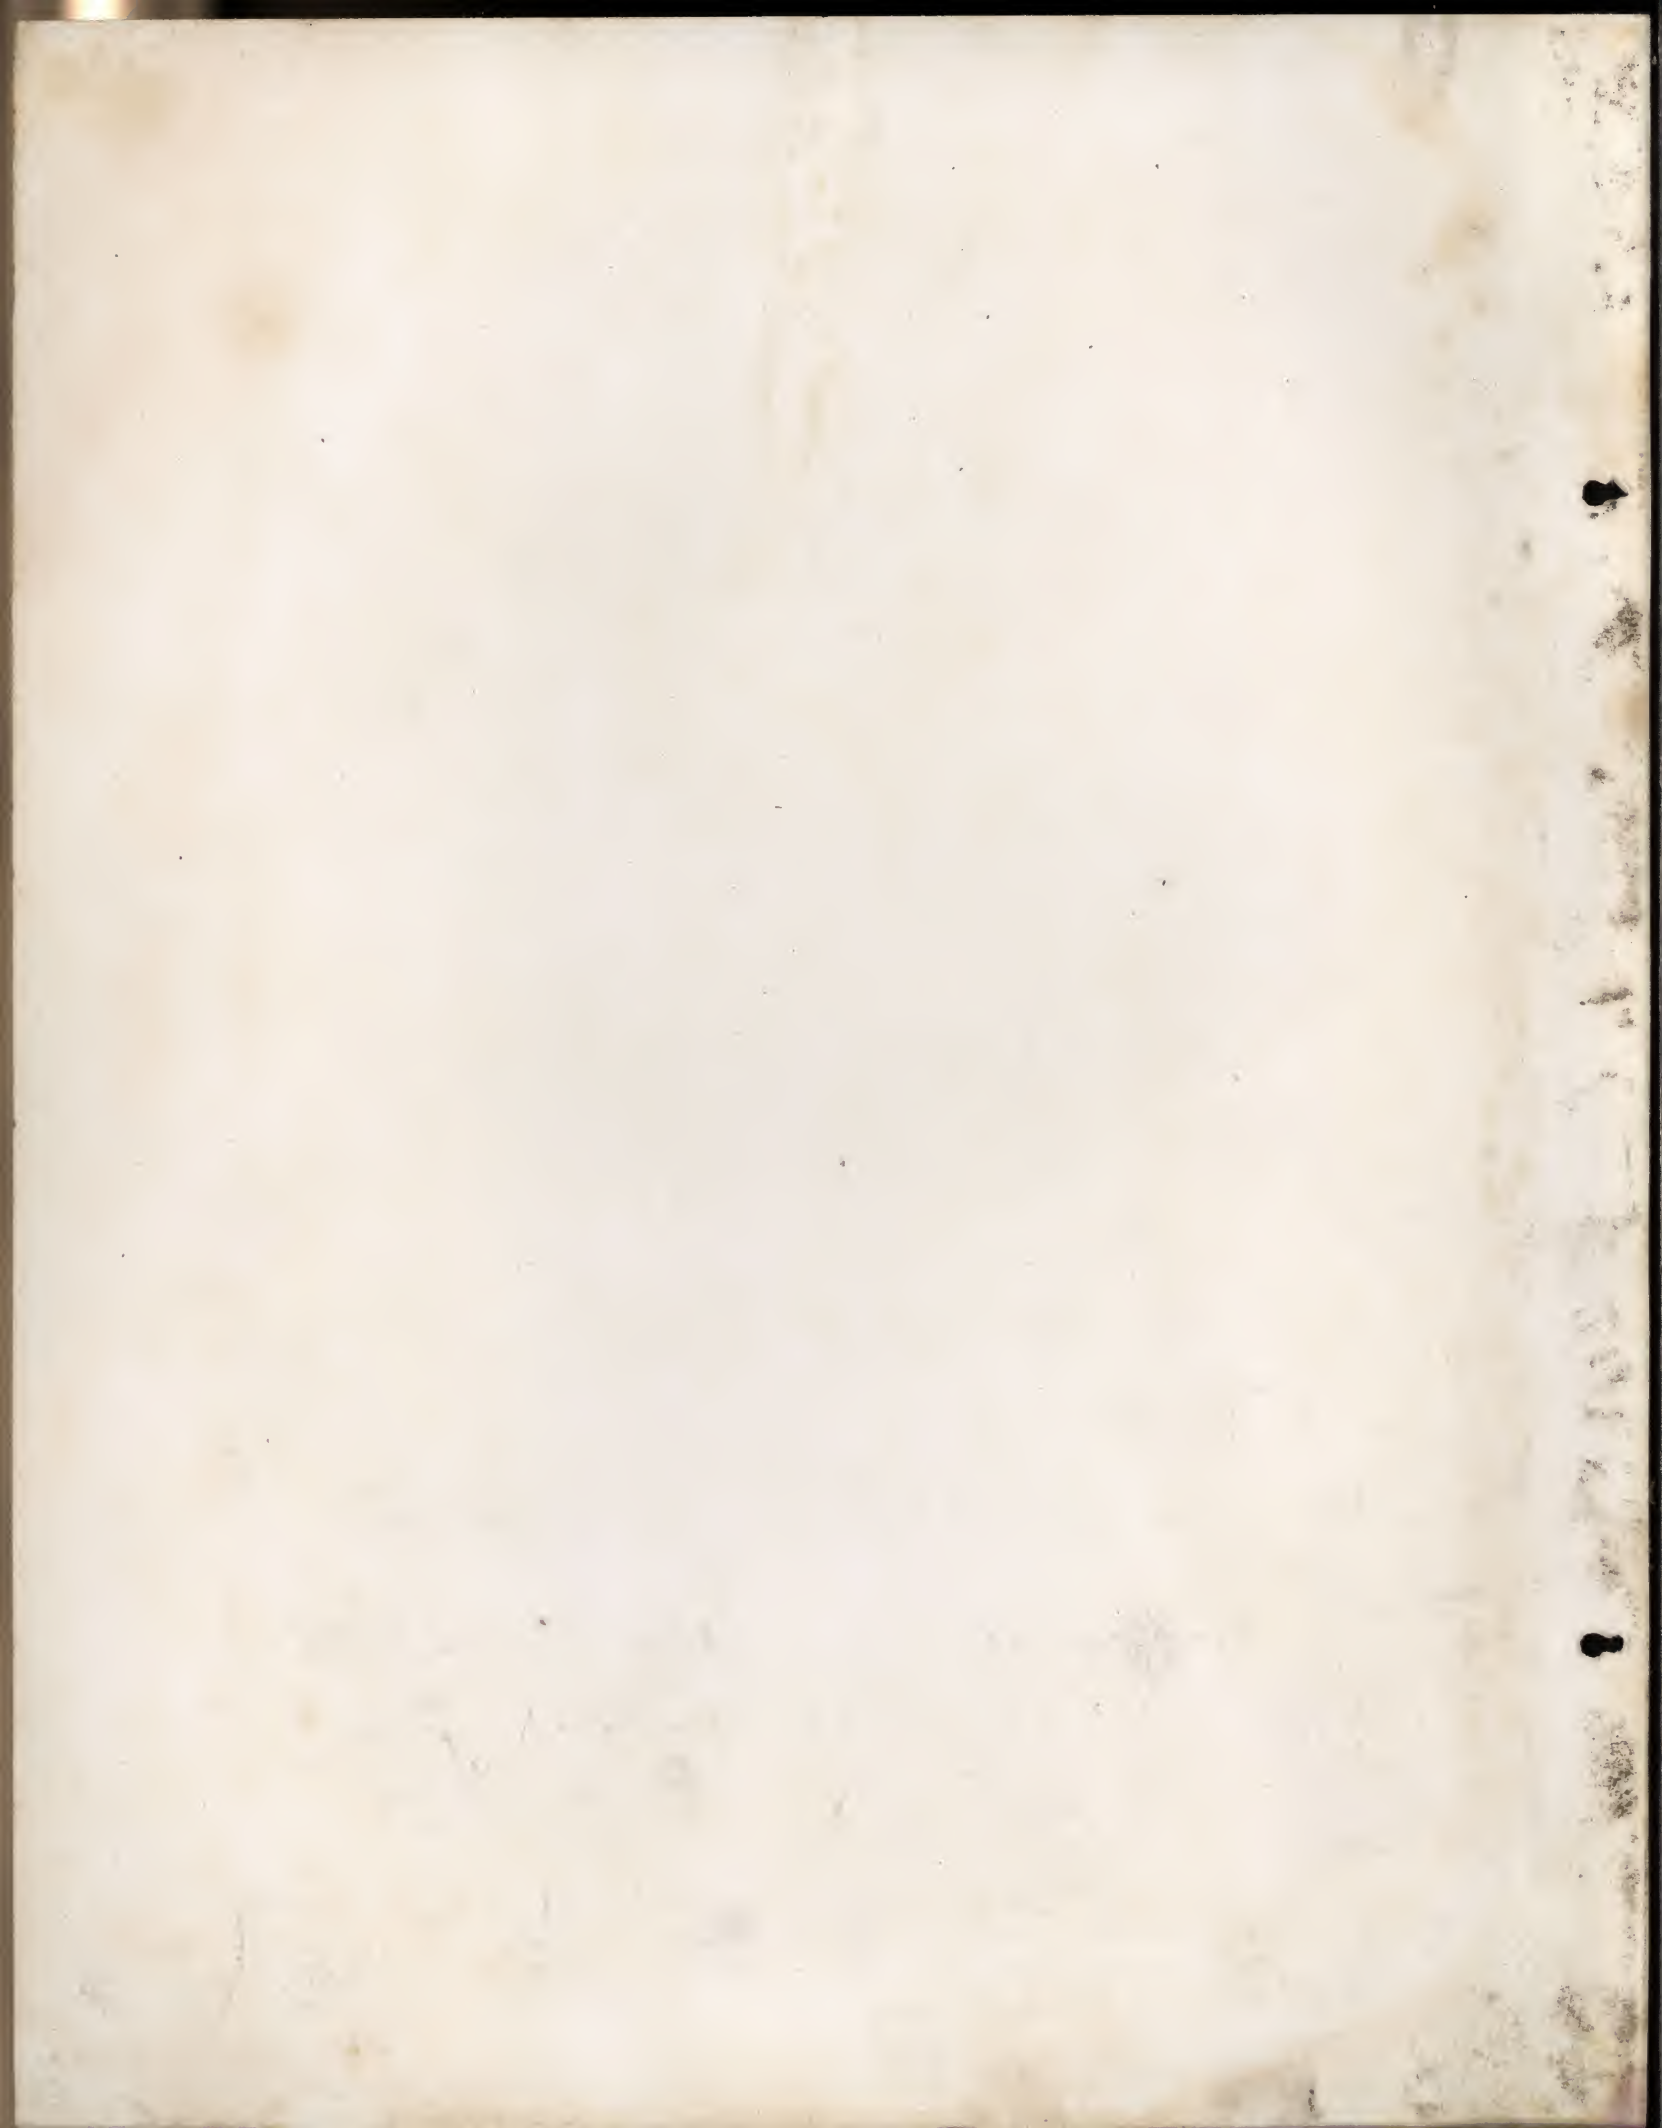

CRANE




C 2370 W. 9.



CRANE



C 2240-S9

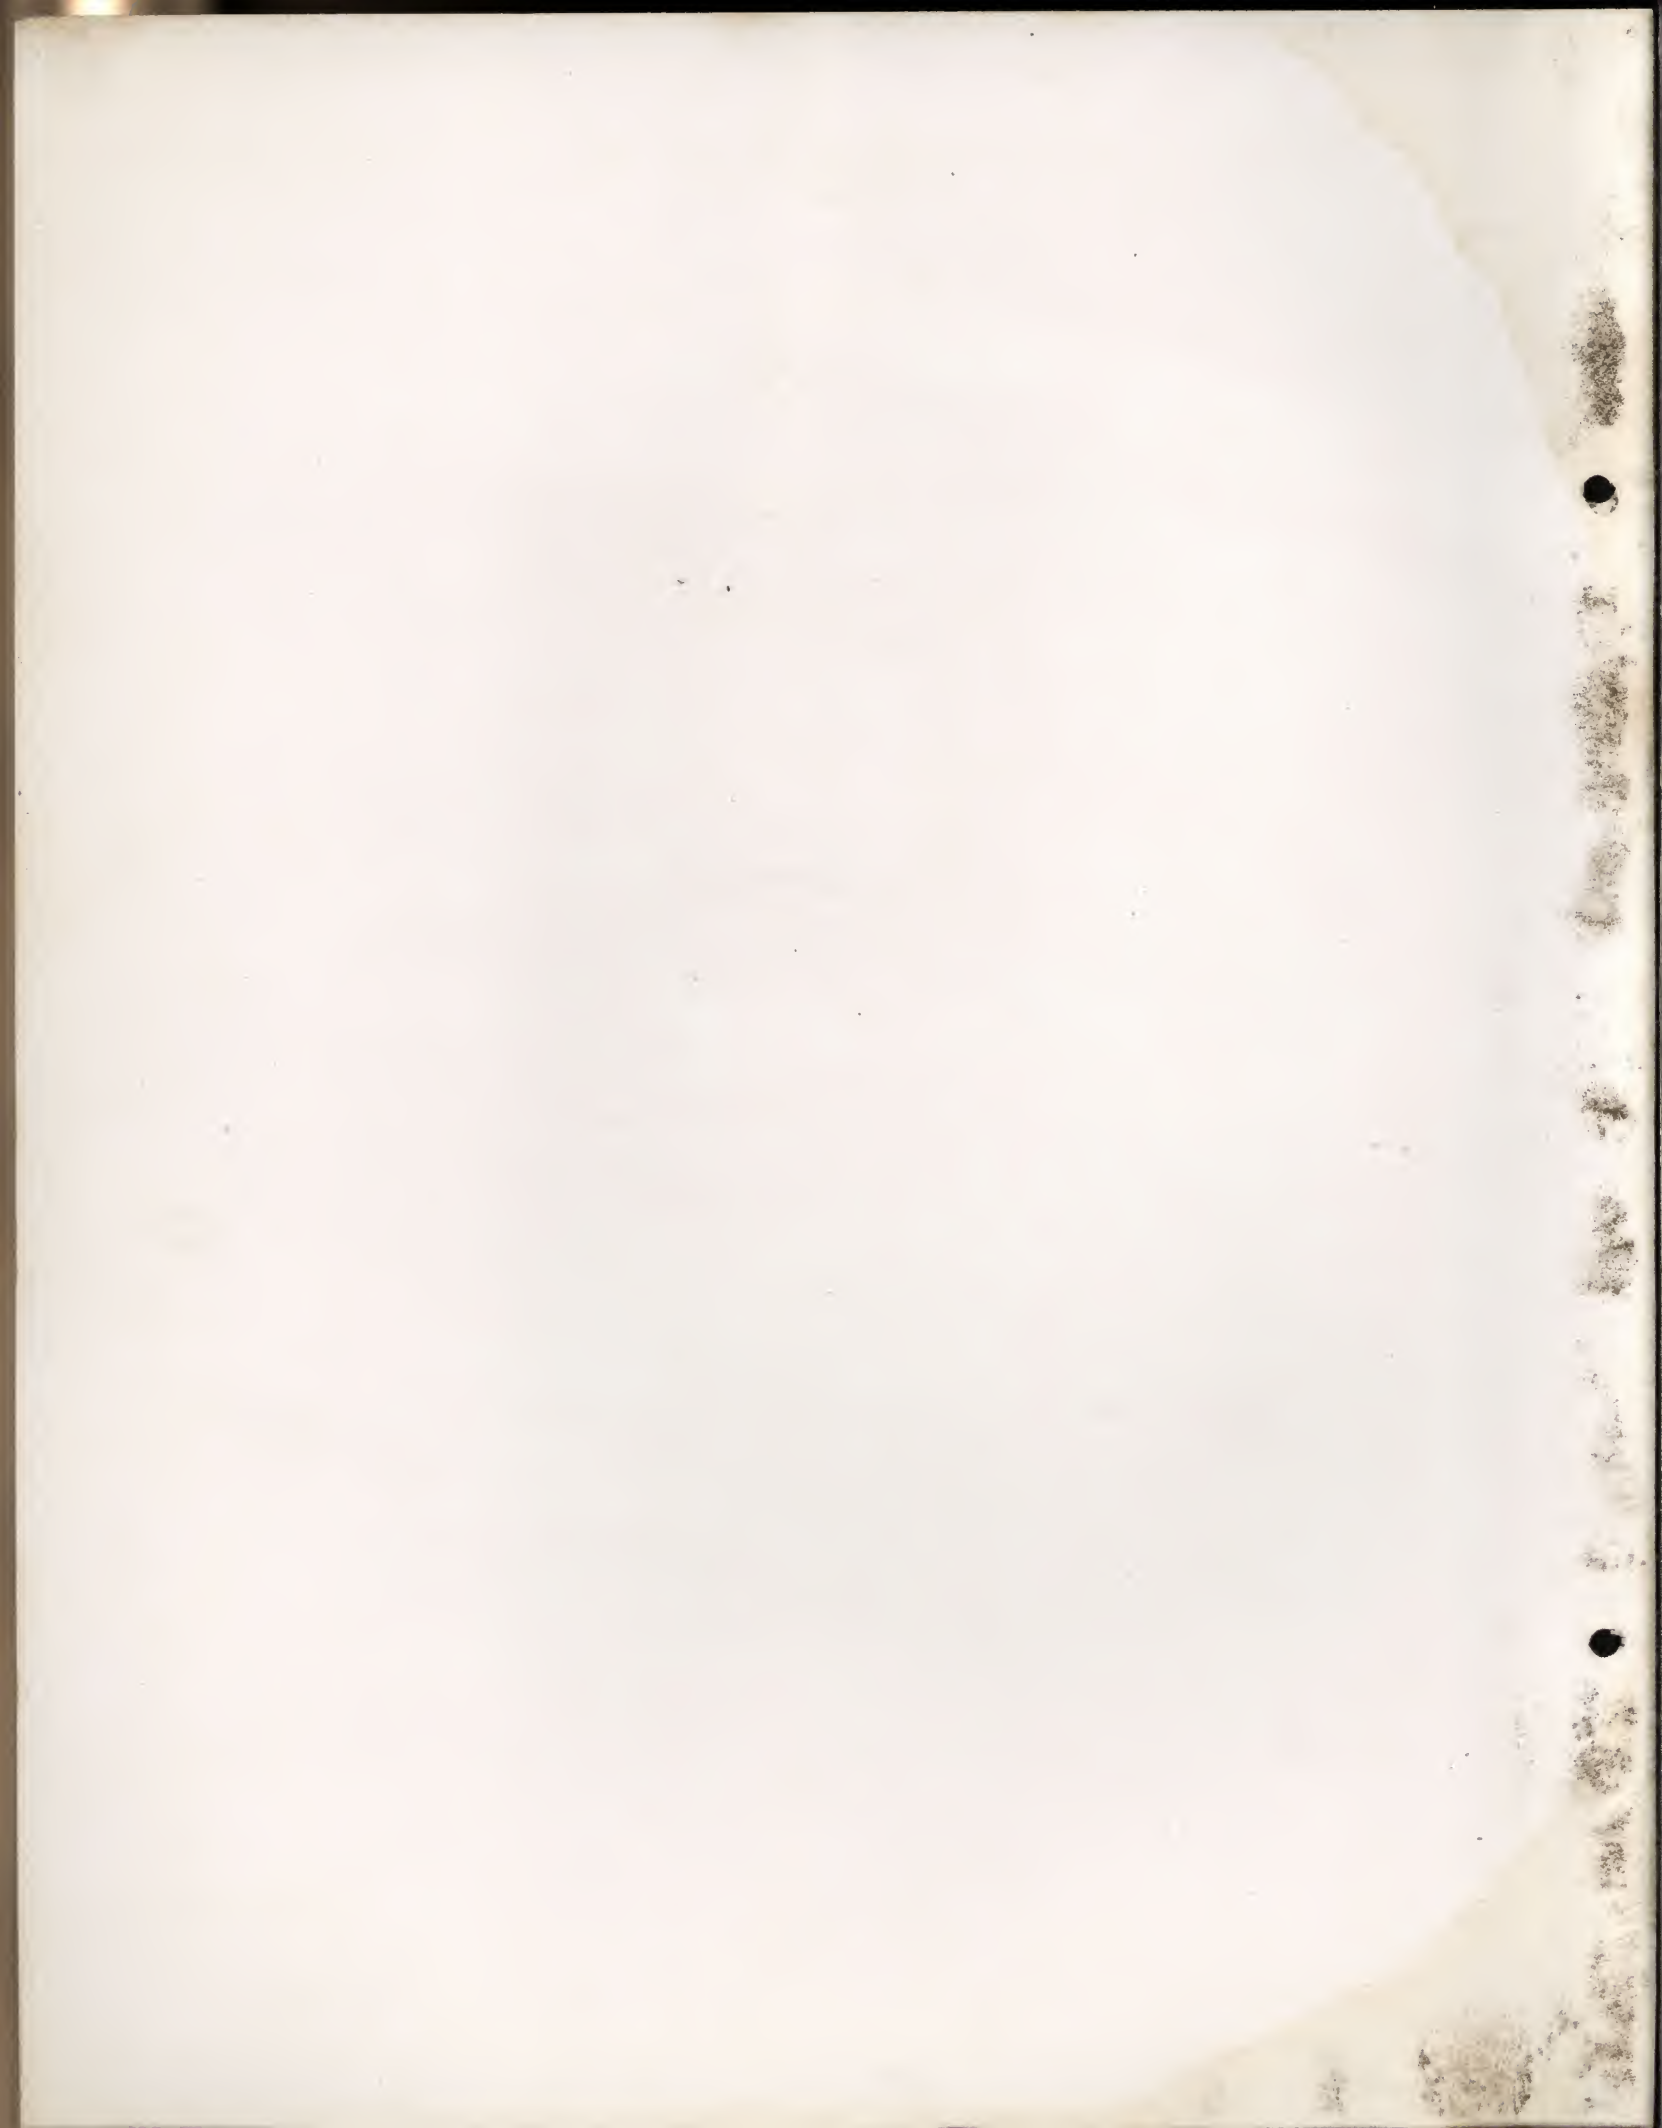


CRANE




C 10600


*With #520. Check open front.
seat with cone.*

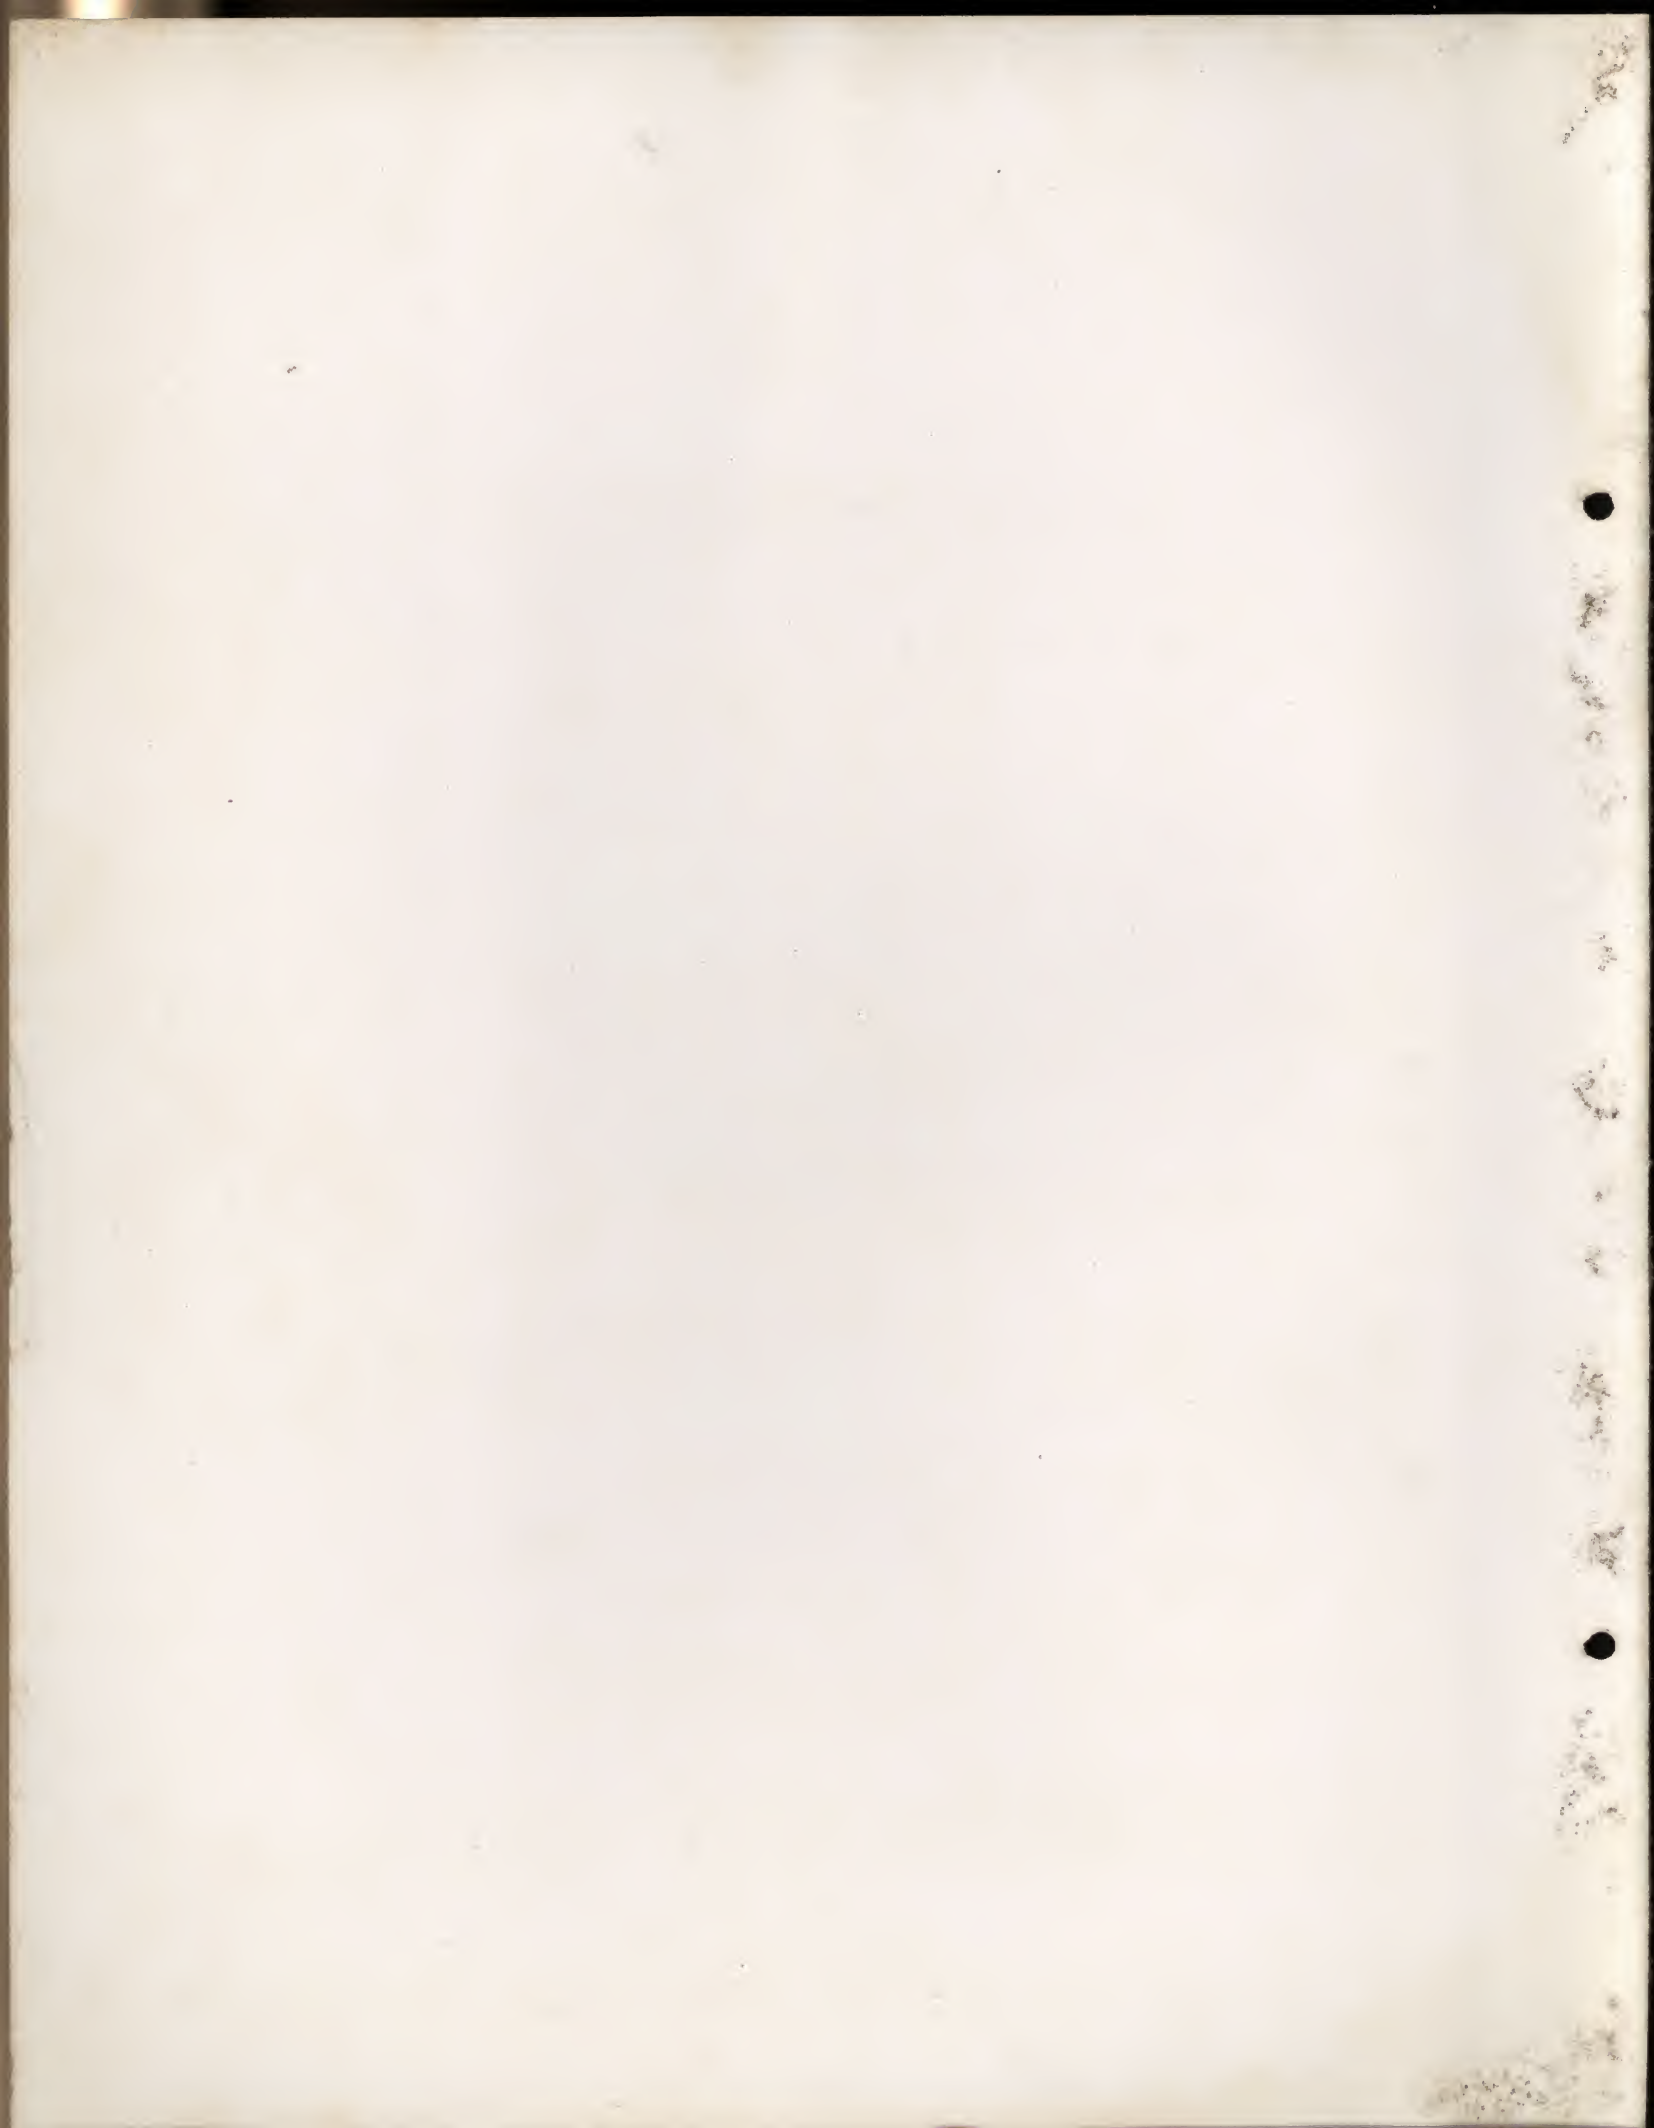

CRANE

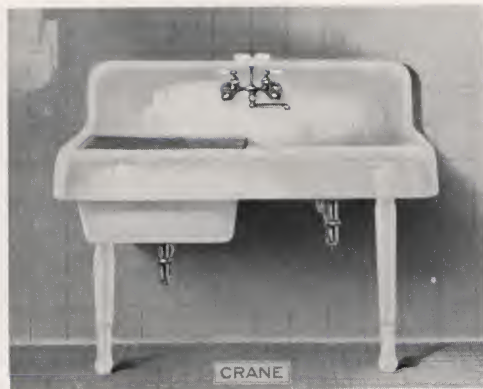


C 21116-L

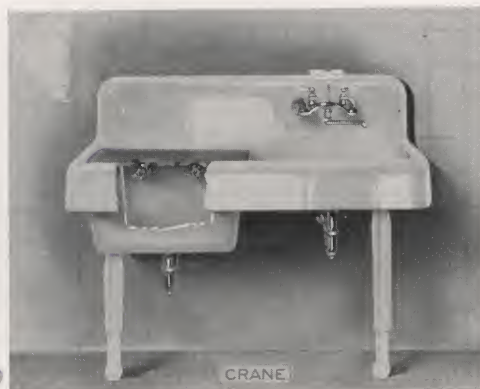


C 21117-L

Less Drain Board

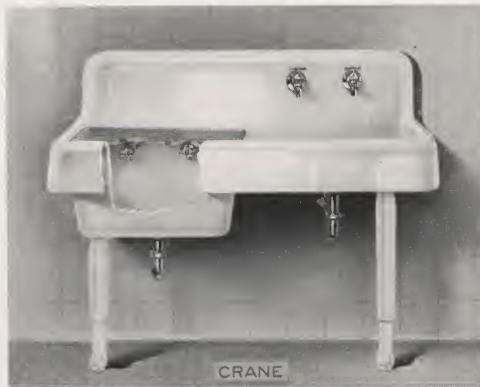

C 21118-L

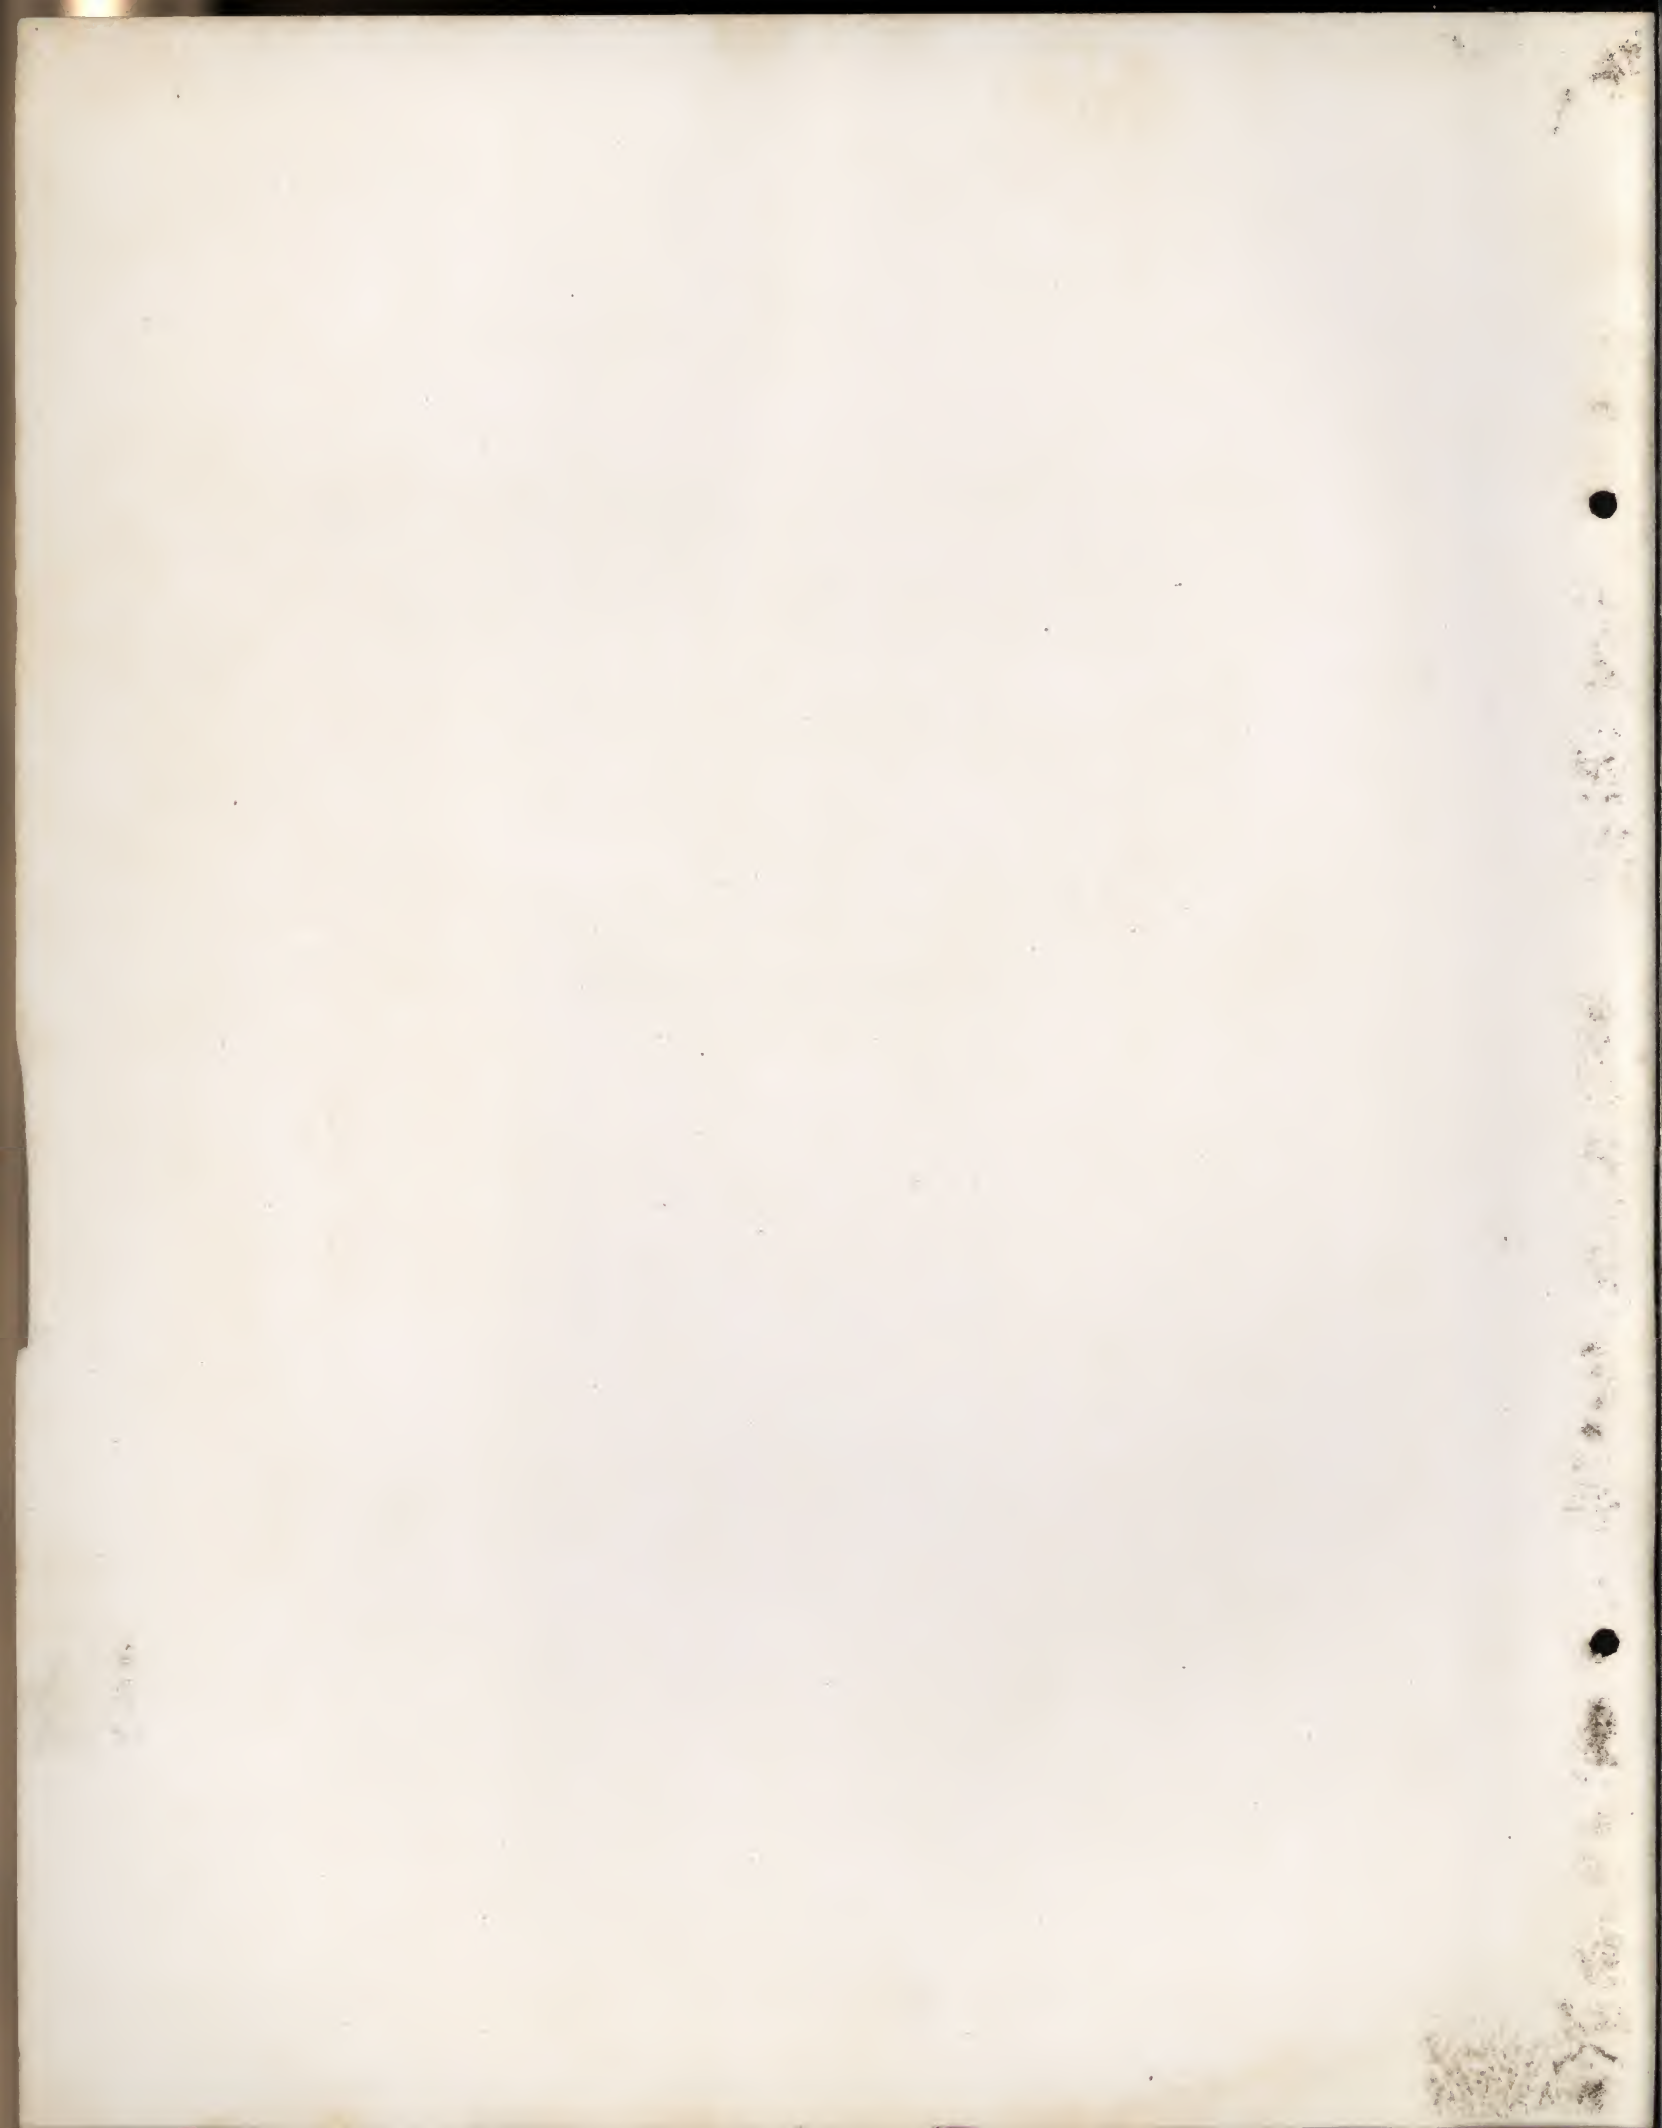


CRANE



C 3350-RE4

Recessed
C 3370-RE4 Recessed bath

CRANE

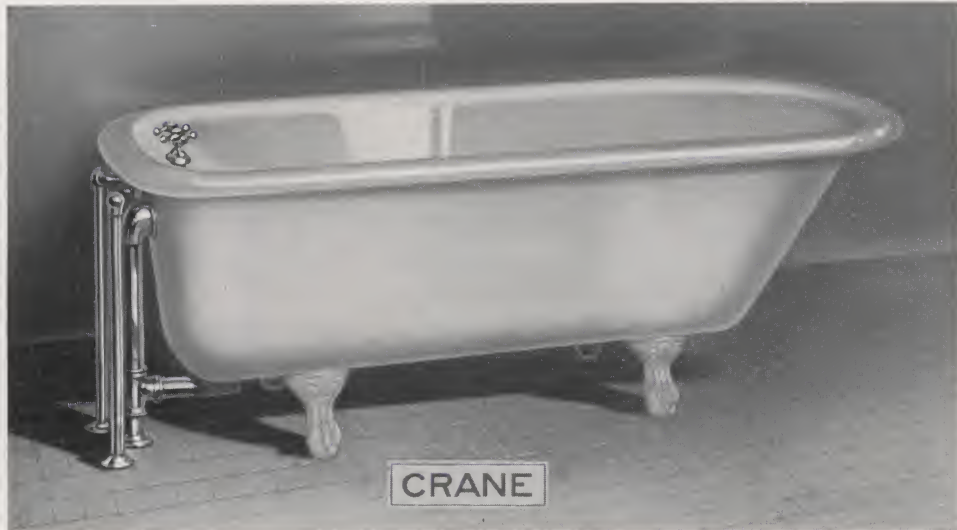

C 3442-E8


CRANE



C 2400-P5

CRANE



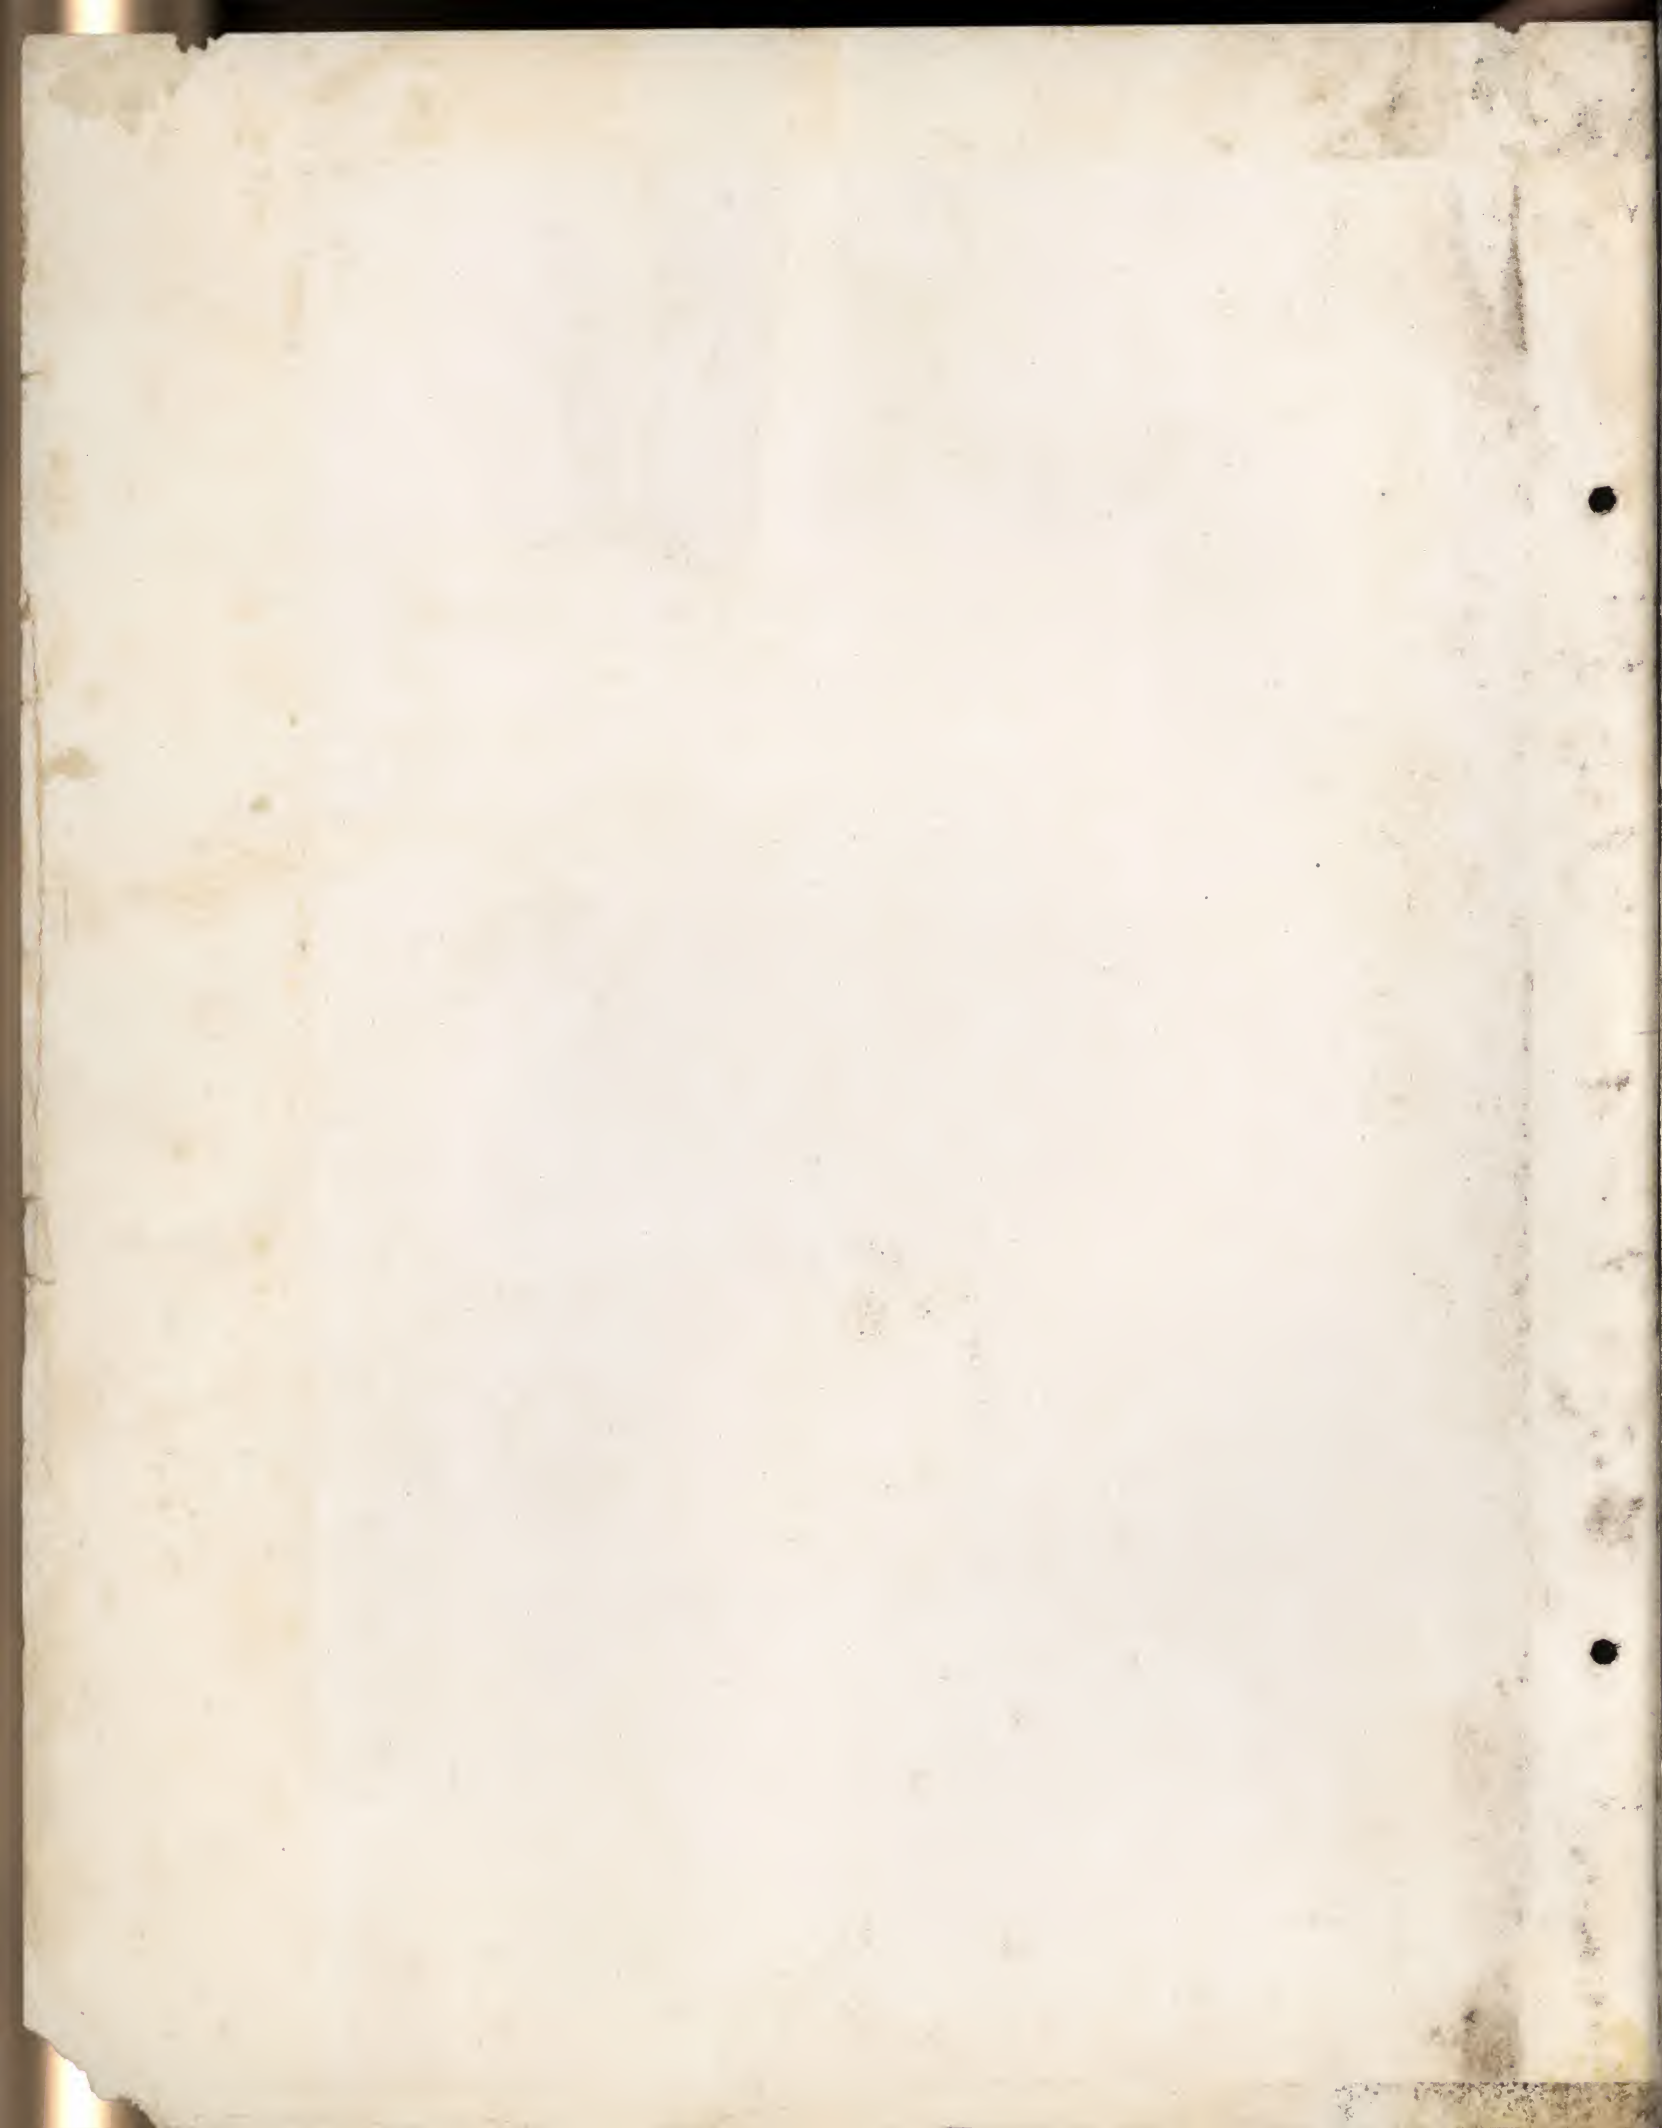

Digitized by:



ASSOCIATION FOR PRESERVATION TECHNOLOGY
www.apti.org

For the

BUILDING TECHNOLOGY HERITAGE LIBRARY

<https://archive.org/details/buildingtechnologyheritagelibrary>

From the collection of:



SOUTHEASTERN ARCHITECTURAL ARCHIVE
SPECIAL COLLECTIONS
HOWARD-TILTON MEMORIAL LIBRARY

<http://seaa.tulane.edu>